100

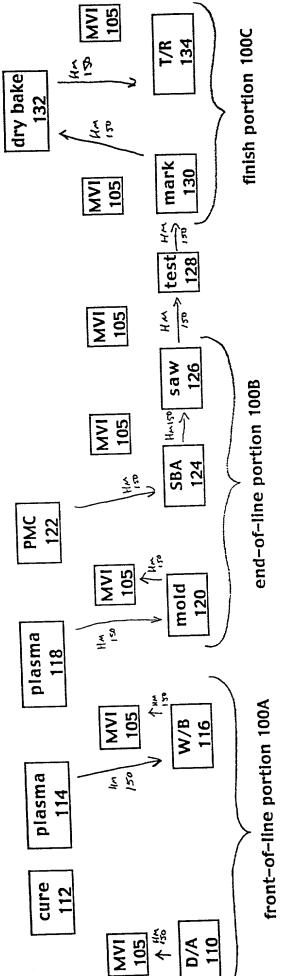


FIGURE 1

=

FIGURE 2

in-line front-of-line portion 300A

V/C		V/C
302	L	302

D/A	cure	plasma	W/B	plasma
304	306	308	310	312

in-line end-of-line portion 300B

V/C 302 V/C 302 V/C 302

			· · · · · · · · · · · · · · · · · · ·	
mold	PMC	SBA	saw	sort
	i i	318	320	322
314	316	310	320	L

in-line finish portion 300C

V/C	V/C	V/C
302	302	302

mark	FVI	T/R
324	326	328

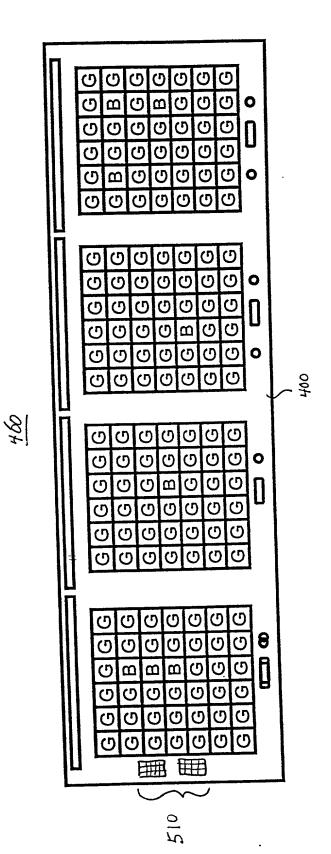


Figure 4

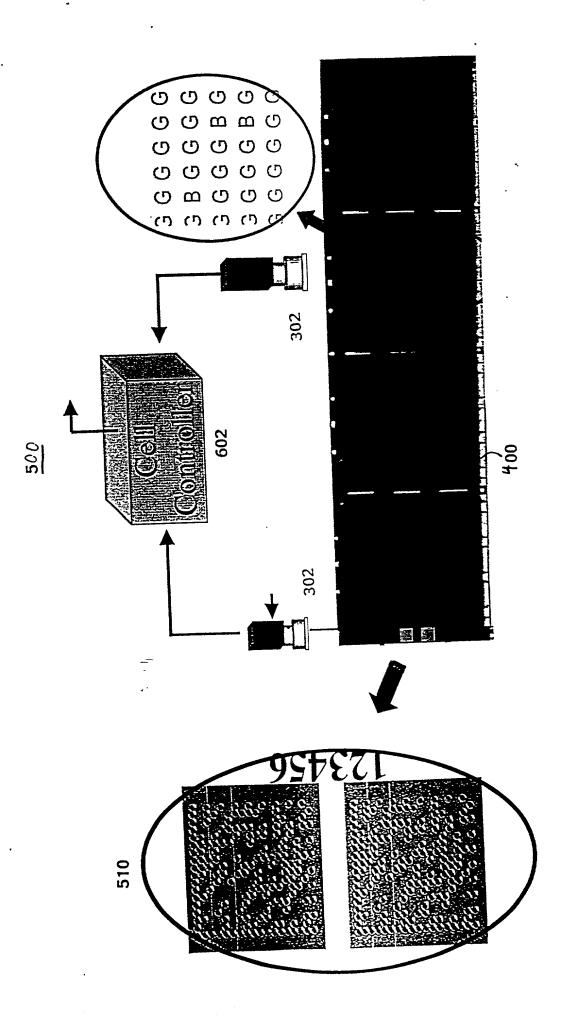


Figure 5

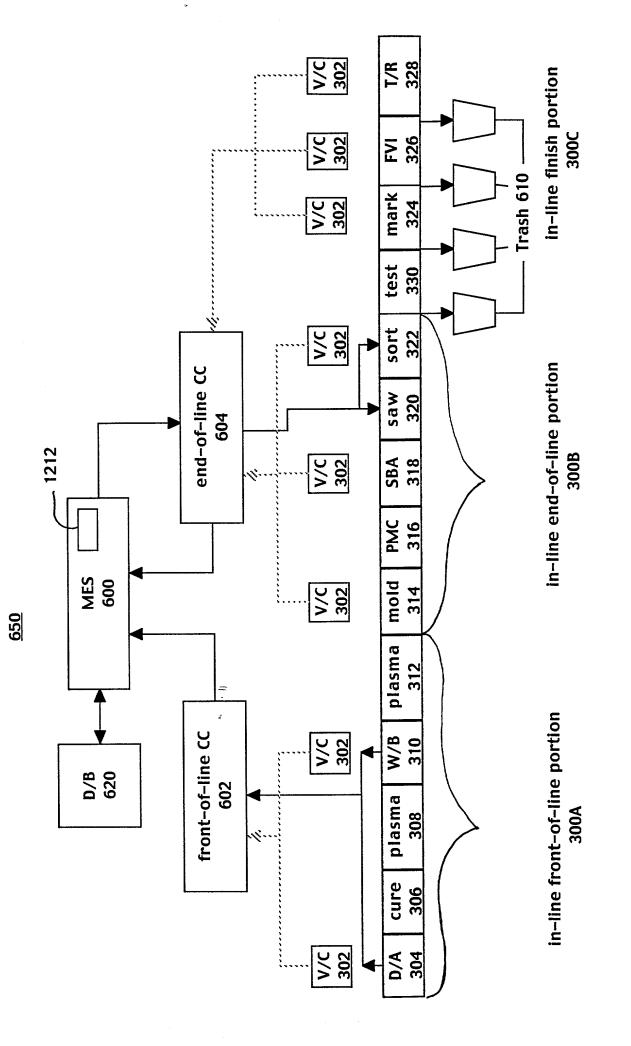


FIGURE 6

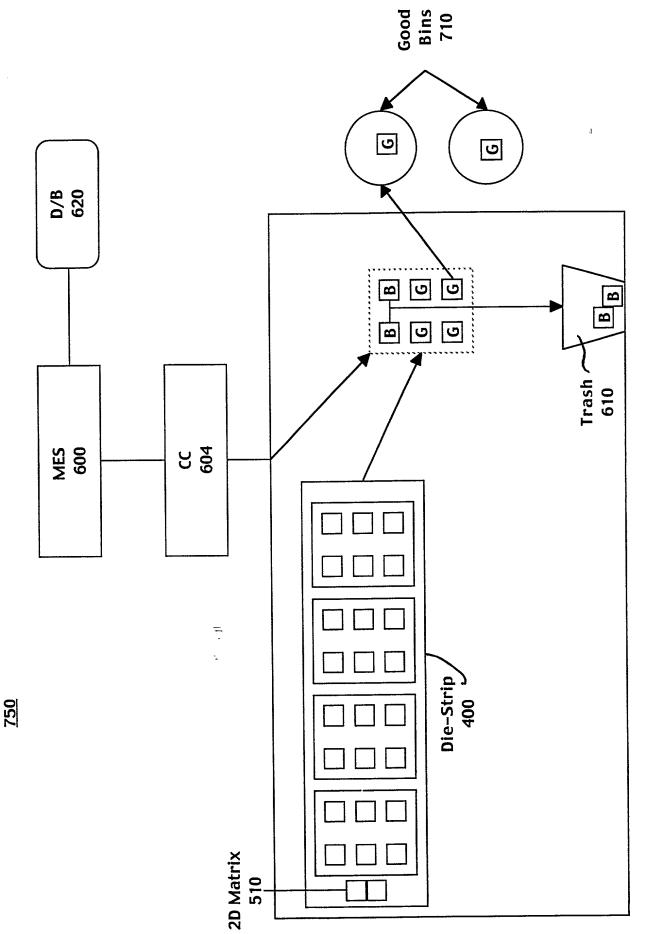


FIG. 7

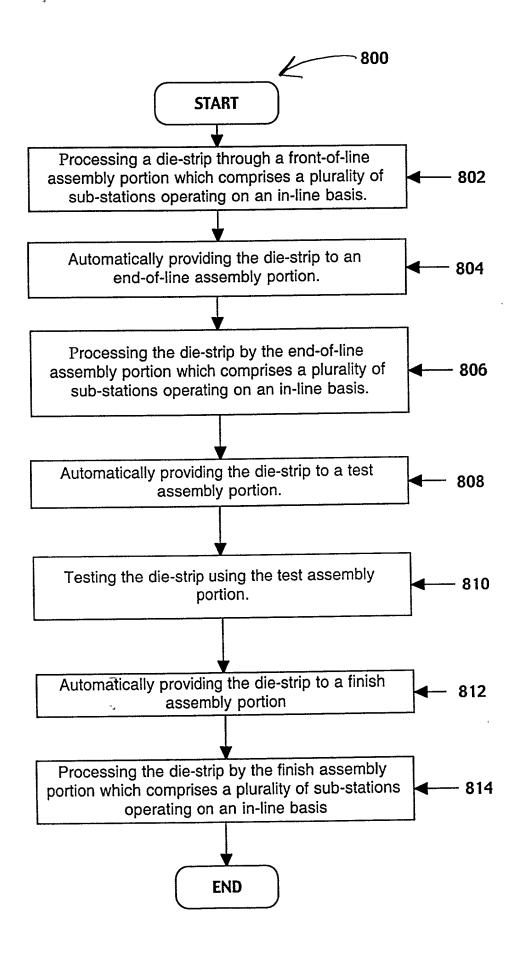
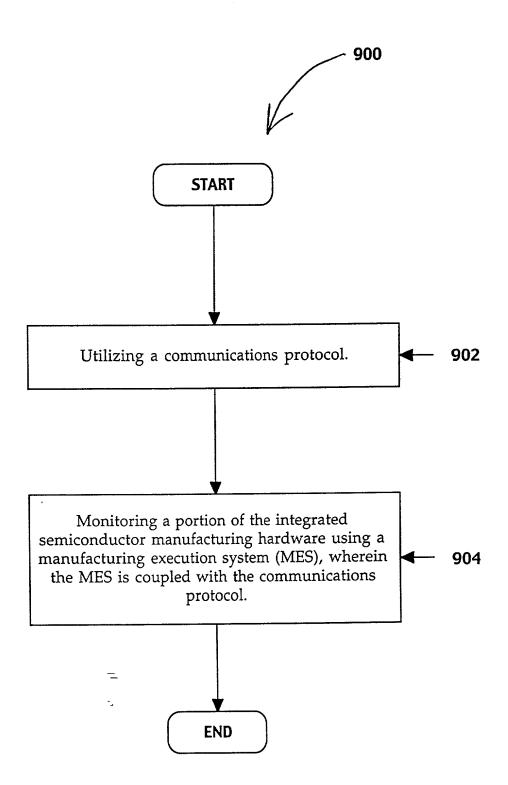


FIGURE 8



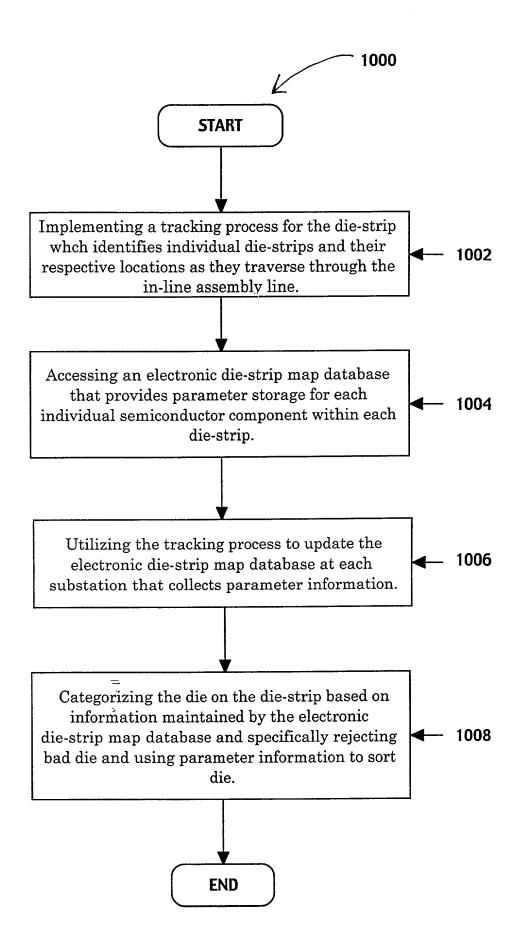
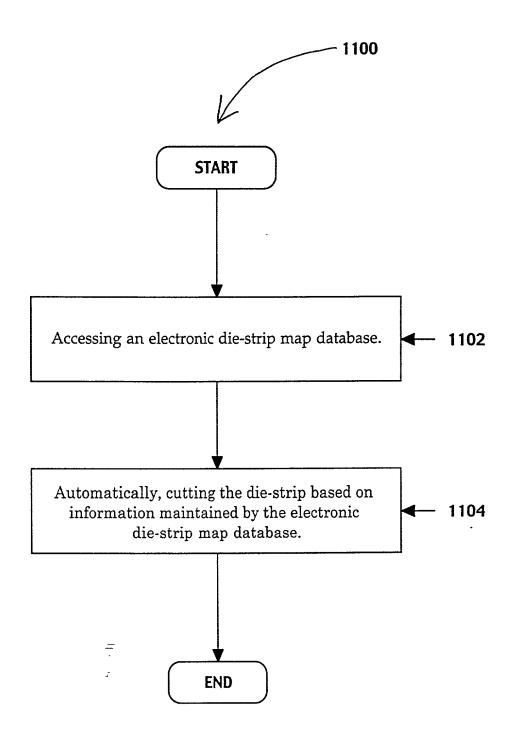


FIGURE 10




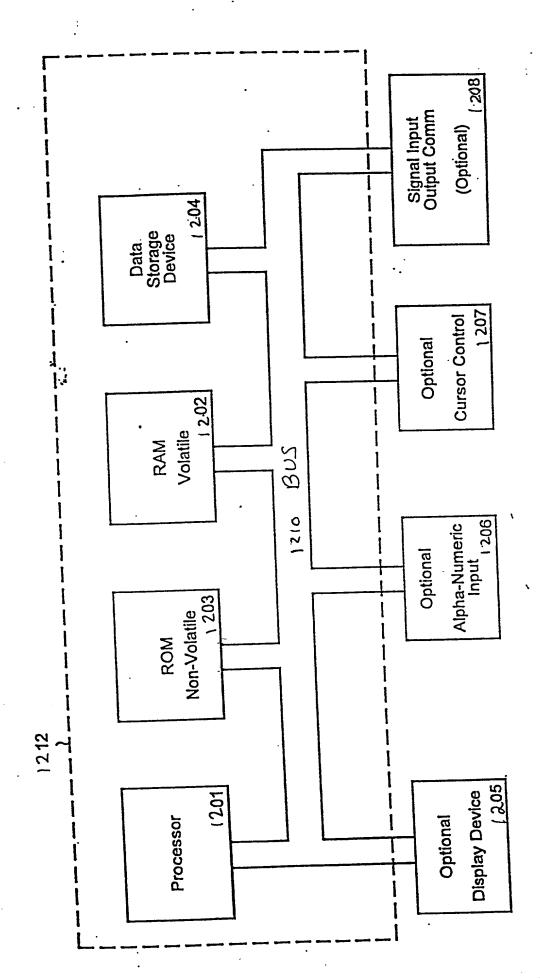


FIGURE 12

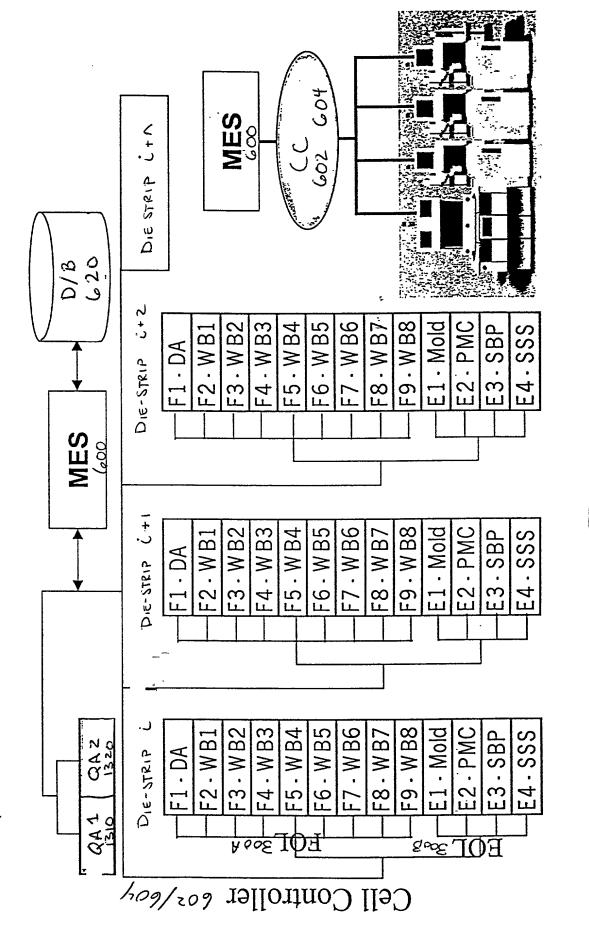

716 13